

Product Improvement Centre EM0480 Recalibration Guide

Step 1

Ensure the coffee grinder is switched off and unplugged from the power outlet. Remove the bean hopper from the motor base, push down and turn anti-clockwise, see figure 1.



Figure 1

Step 2

To remove the top burr turn the grind adjustment collar in an anti-clockwise direction until it stops, see figure 2.

Note: The top burr can only be removed when graphic arrow on the grind adjustment collar is aligned with the arrow on the motor base.


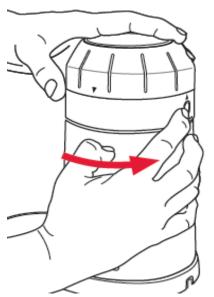


Figure 2

Step 3

Press and hold down the "UNLOCK" button at the rear of the motor base and with the other hand turn the grind adjustment collar anticlockwise until the graphic arrow on the collar is aligned with the arrow on the motor base, see figure 3.



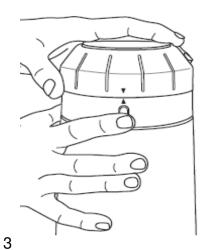


Product Improvement Centre EM0480 Recalibration Guide

Step 4

Lift out the top burr from the grind adjustment collar using the handle, see figure 4.



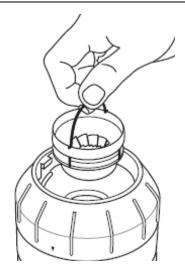

Step 5

Lift the grind adjustment collar away from the motor base.

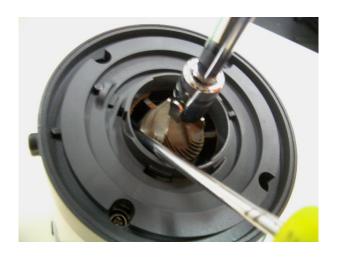


Figure 5

Step 6

Using a 10mm spanner or socket, unscrew the cap nut in a <u>clockwise</u> direction.

Tip: To hold the bottom burr in place while unscrewing the cap nut, insert a screw driver into the unit and press it against the burr.





Product Improvement Centre EM0480 Recalibration Guide

Step 7

Remove the star washer, burr blade and the lower burr.

Step 8

Add a spacer to make the grind finer or remove a spacer to make the grind coarser.

Note: One spacer is approximately equivalent to 7 graduations on the grind adjustment collar.

For assembly repeat the above steps in reverse order.



Caution: During assembly and before securing the lower burr, ensure the burr location hole is aligned with the burr location pin.

